


View of the controller

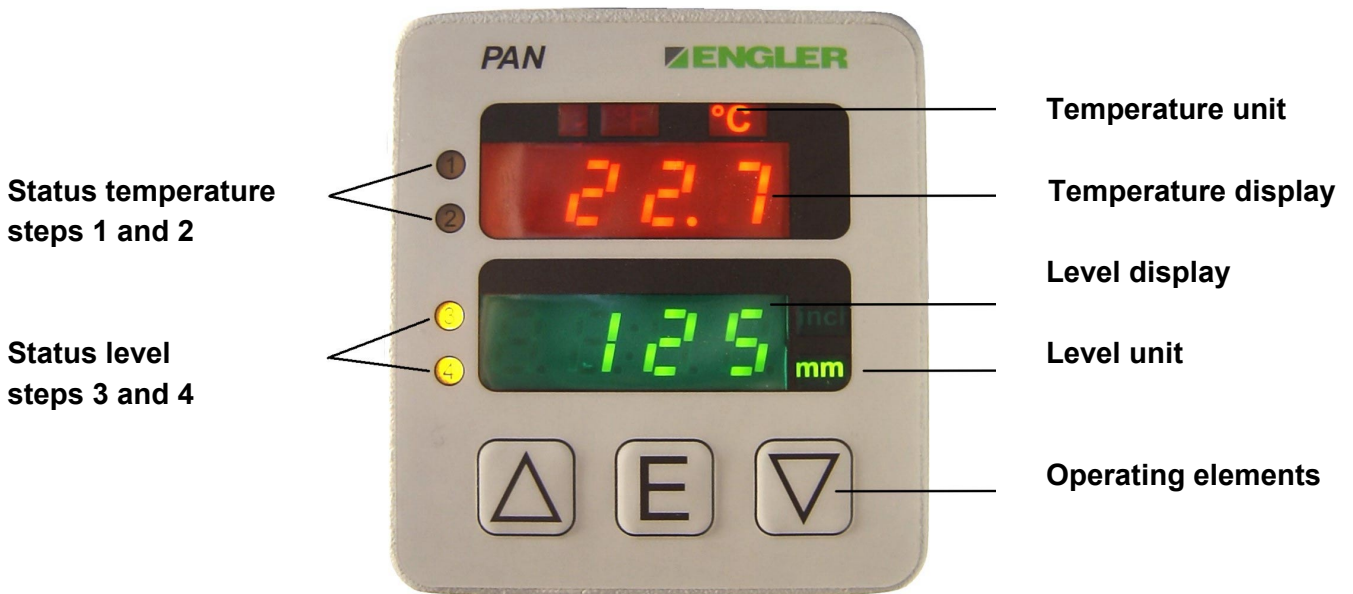

Controller operating instructions

Switching on:

When the PAN 1 is commissioned, the red display "P A n" and green display "t n 1.0" appear at the controller for a period of 2 seconds. The actual values then appear.

Menu points

- View parameters
- Set parameters

Operation (can be set using the keys):

- Parameter list with the ▲ and ▼ keys
- Parameter adjustment with the E key
- Parameter setting with the ▲ and ▼ keys

Indication in the parameter field

- S. e. t . . Access to parameter setting
- S. P. . x. Switching point for step x.
- r . P. . x. Reset point for step x.
- o. u. t . x. Output switching behaviour for step x.
 - H. . n . o. Output hysteresis n.o. contact.
 - H. . n . c. Output hysteresis n.c. contact.
 - F. . n . o. Output window n.o. contact
 - F. . n . c. Output window n.c. contact.

- E. F. . . Extended functions
 - U. n . . t. Temperature unit.
 - U. n . . L. Level units.
 - F. o . . x. Output sw. behaviour step x in case of error.
 - n . o. Output n.o. contact
 - n . c. Output n.c. contact.
 - S. n . . x. Current source span, value for 20mA.
 - O. F. . x. Current source offset, value for 4mA.
 - n. P. . . Zero point value for level.
- E. n. d . . End parameter setting.

Menu structure

End parameter setting	End
Extended functions	EF
Switching behaviour	out 4
Step 4 Reset point	r P 4
Switching point	SP 4
Switching behaviour	out 3
Step 3 Reset point	r P 3
Switching point	SP 3
Switching behaviour	out 2
Step 2 Reset point	r P 2
Switching point	SP 2
Switching behaviour	out 1
Step 1 Reset point	r P 1
Switching point	SP 1
Access parameter setting	Set


--E -->
 < ----- --|


End	End parameter setting
nP	Zero point, level
OF 2	Span and offset optional
Sn 2	Current source, level
OF 1	Span and offset optional
Sn 1	Current source, temp.
Fo 4	Output switching behaviour In case of error
Fo 3	
Fo 2	
Fo 1	
Un L	Level unit
Un t	Temperature unit


Extended functions

Main parameters



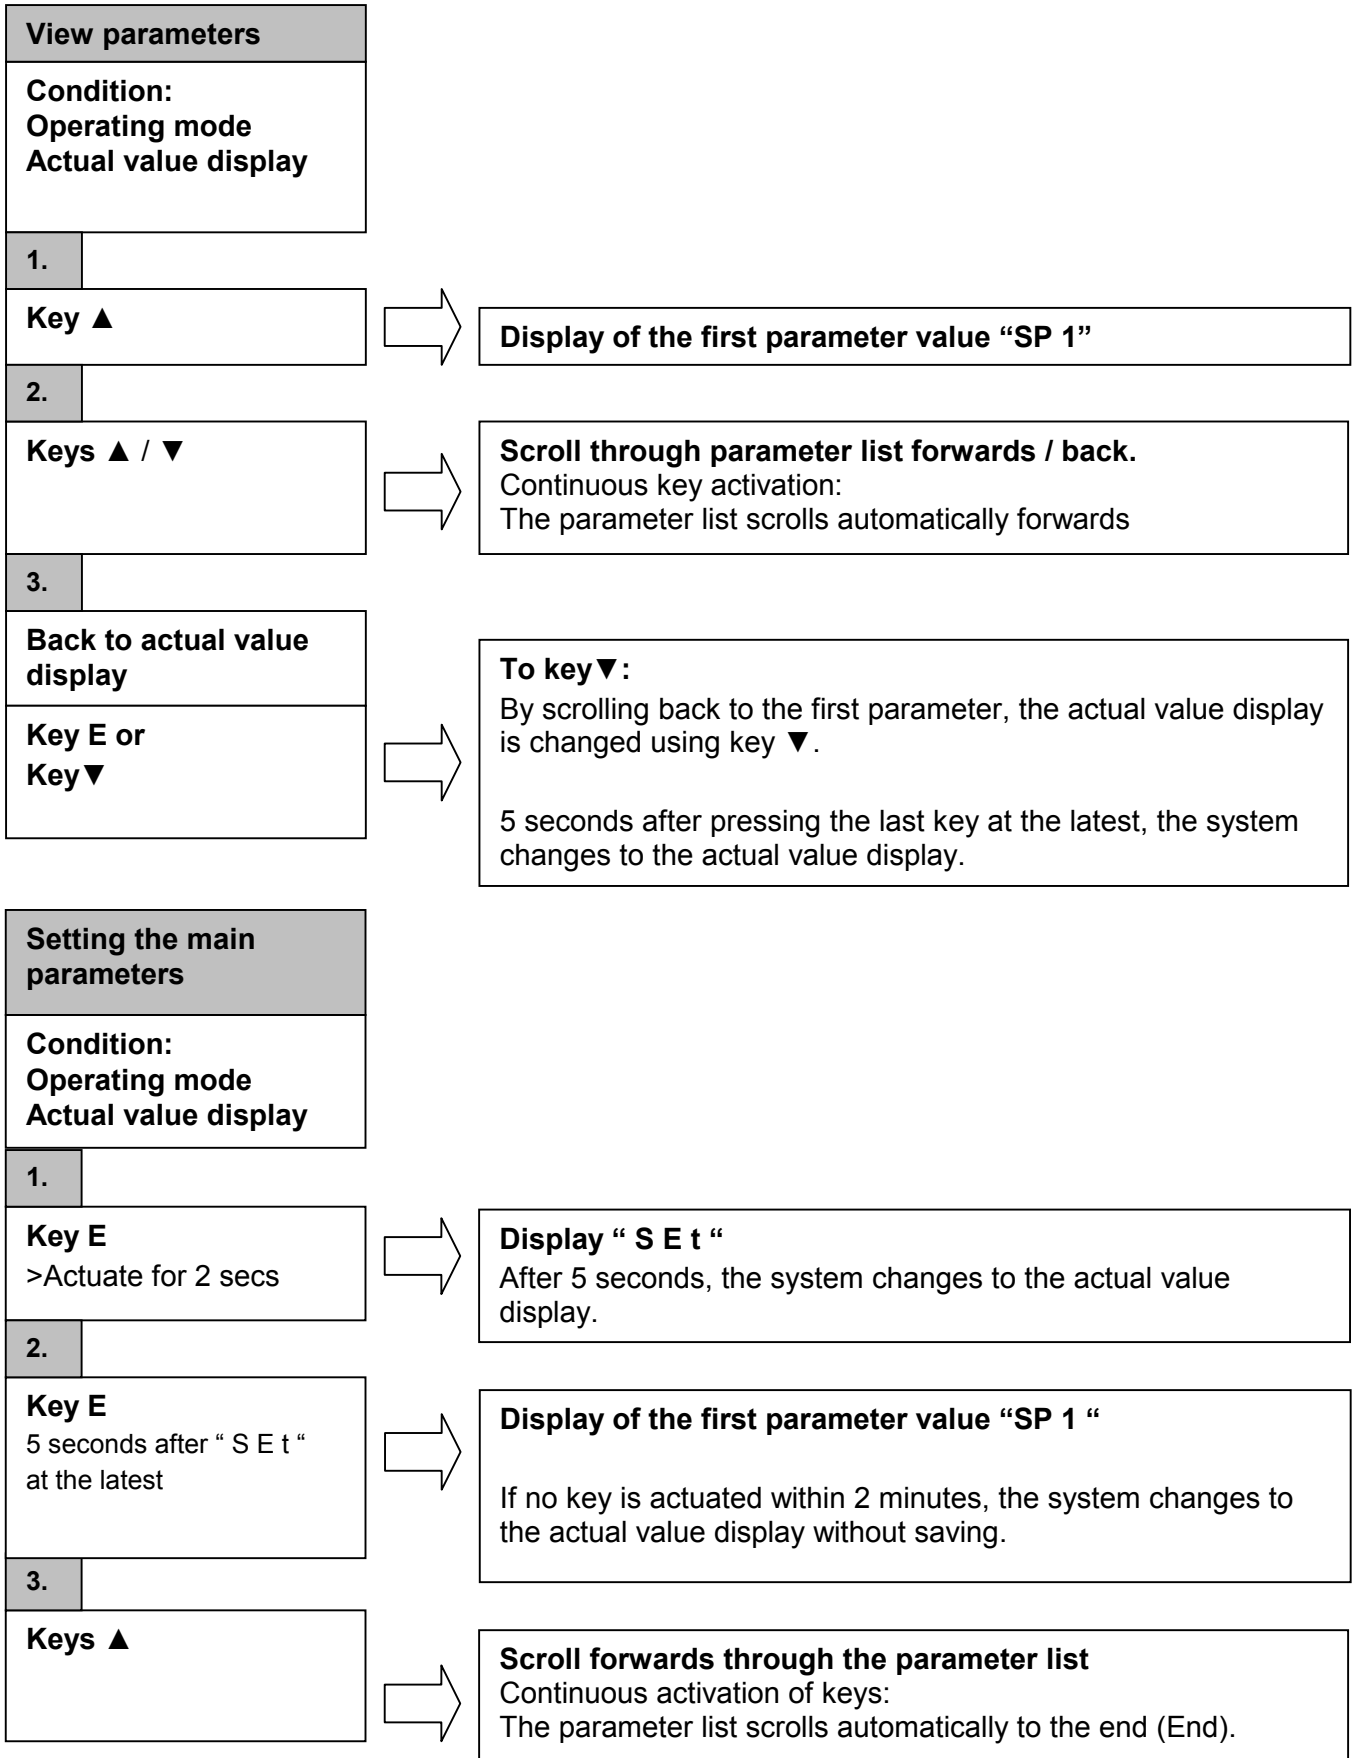

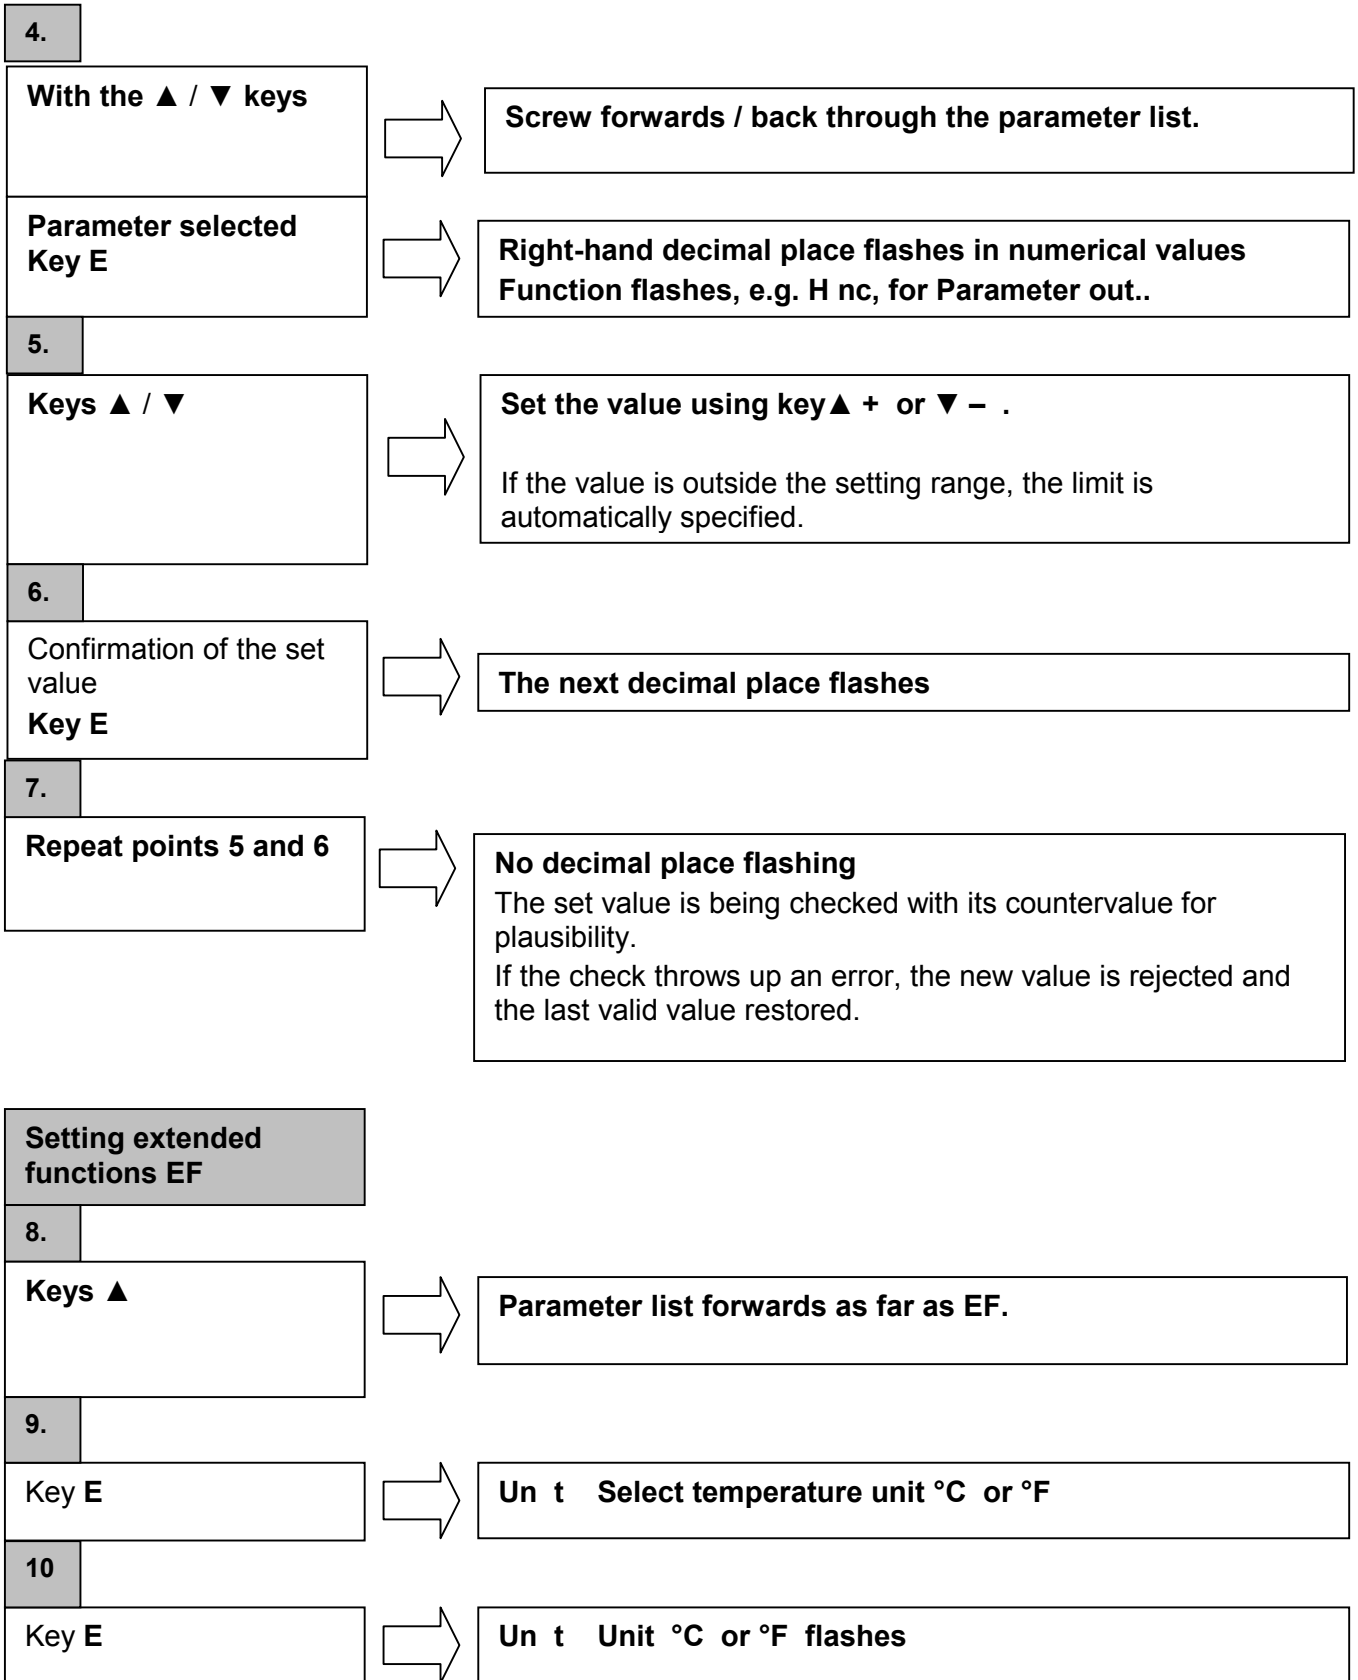

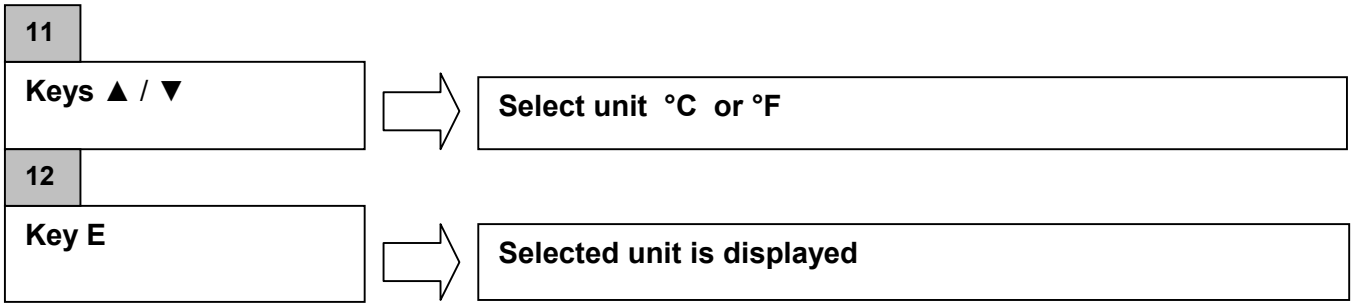

Using the keys ▲ / ▼
Additional functions (see menu structure) can be accessed in the extended menu. To set the functions, proceed as described under point 9 to point 12.

